

THE USER MANUAL
P80
GAS BLOWBACK PISTOL





USE 6mm BBS


WARNING:

- DANGEROUS: NOT A TOY.** Adult supervision required. Misuse or careless use may cause serious injury.
- FOR AGES 18 YEARS AND UP.** Must be 18 years of age to purchase; minors require parent or legal guardian supervision to operate.
- EYE PROTECTION REQUIRED.** Always wear eye and body protection to prevent injury. Do not fire at hard surface to prevent ricochet.
- READ INSTRUCTION BEFORE OPERATING.** Follow safe handling procedures at all times. The purchaser and user should conform to all laws governing the use and ownership of airguns.
- DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC.** It may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.


AGE: ABOVE 18
Made In China

WARNING  Always read through this manual before operation


- Read through this manual before shooting, paying special attention for safe operation.
- Thoroughly understand the warnings and cautions for safe operation.

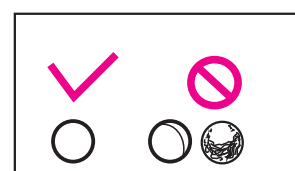


Always use precision BB Bullets for this air gun. Never use any used BBs




Do not look directly into the gun barrel to avoid accidental discharge of BB.

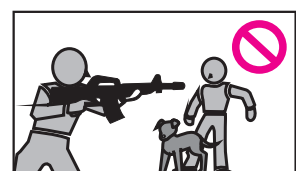


Never aim or shoot a person or animal as the target. Always set the selector on safety position except when you are ready to shoot a target.

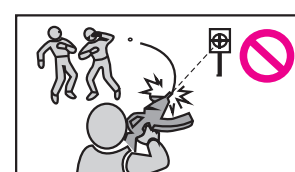


Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.




Do not brandish in public, do not alter the coloration and warnings, such an action is dangerous and may be a crime.

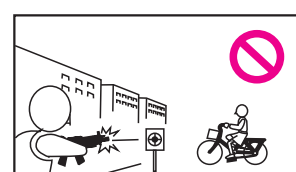


Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

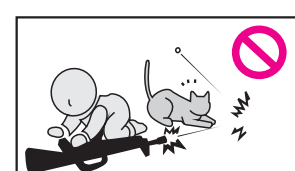

Always remove the battery and store the air gun in a case or bag and at a place out of reach by children so that they will not be injured during mischevous play.

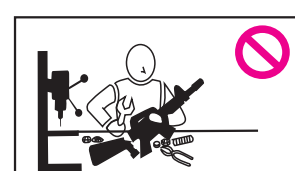


Disassembling or modifying the gun may generate danger or adversely affect the performance. So avoid disassembling or modifying the air gun.

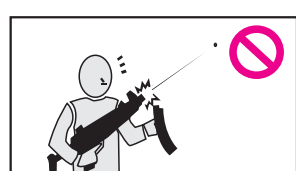

There are cases that bullets remain in the gun after the magazine is disconnected, pulling the trigger carelessly is extremely dangerous. After towards a safe direction and fire to confirm that no bullets remain in the gun.

1

1 Parts Diagram

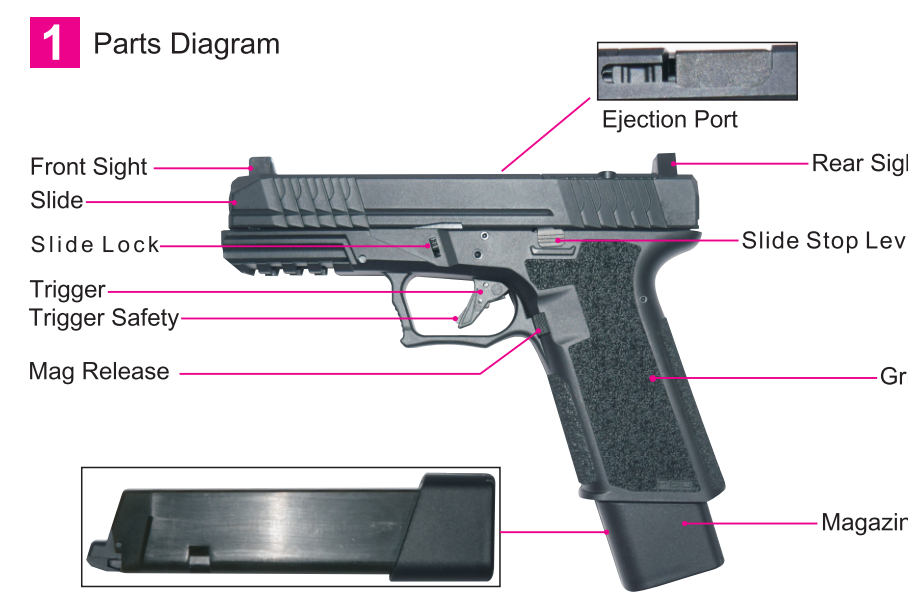

Labels: Front Sight, Slide Lock, Trigger, Trigger Safety, Mag Release, Ejection Port, Rear Sight, Slide Stop Lever, Grip, Magazine

2 Filling Gas



Labels: Intake Valve, Output Valve

- Insert green gas nozzle into the intake valve. Fill mag until full. See pictures above for reference.

2

3 Load Bbs

 Use 6mm diameter plastic BBs. Use other types of BBs might cause bodily harm or damage to the airsoft gun.

- Place one hand under the magazine. Use the thumb of the other hand to operate the mag release. Remove the magazine by pressing the mag release and pull on the magazine if required. **CAUTION: the magazine might drop out and cause damage to mag and bodily harm.**



● Mag Release

- Fill approximately 30 BBS



● Pull down the follower and install BBs at the feed lip.



Follower



● Pull the follower all the way down. Install BBs from the bottom.



Follower

3

- Insert magazine into the grip until the mag release clicks.



Click


4 FIRING (ensure surrounding is safe to shoot)



- Pull slide all the way back and the slide will return to forward position to load the first BB into chamber.



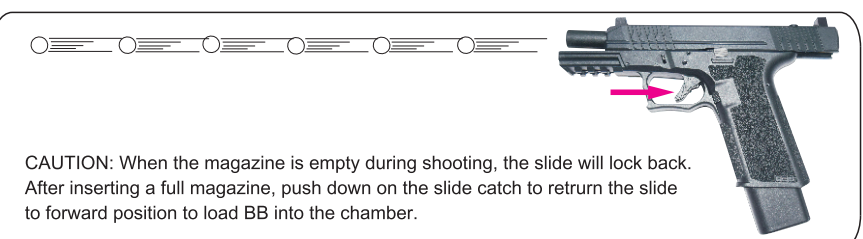

- Pull trigger along with the trigger release to fire.




CAUTION: When the magazine is empty during shooting, the slide will lock back. After inserting a full magazine, push down on the slide catch to return the slide to forward position to load BB into the chamber.

4


5 Adjust Hop-up




- Remove slide by holding down the slide release and push slide forward.




- Hop-up adjustment wheel is located on the hop-up unit in the slide.

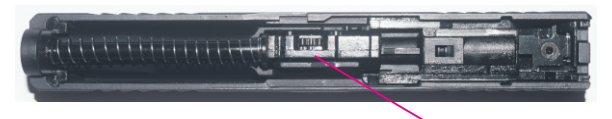

- Adjust hop-up adjustment wheel in small increments.
- Fire a few shots to check trajectory and adjust hop-up adjustment wheel accordingly.

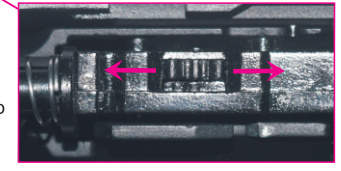

- At the optimal setting, the BBs should travel at the maximum distance while maintaining a straight line.

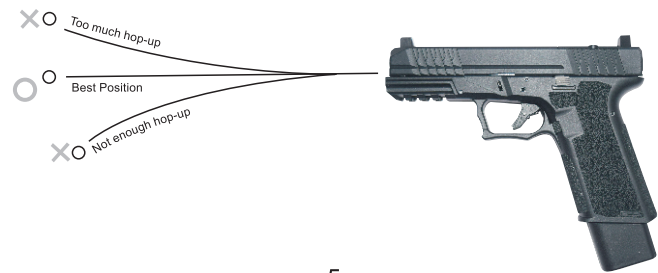


Labels: Too much hop-up, Best Position, Not enough hop-up

5

6 Maintenance


Maintenance when bullet speed becomes low

- Apply Oil as shown below, using the cleaning rod and oiled cotton cloth. Insert cleaning rod into the barrel.
- To complete the cleaning, use the cleaning rod (with cotton) as shown below. To remove excess oil.

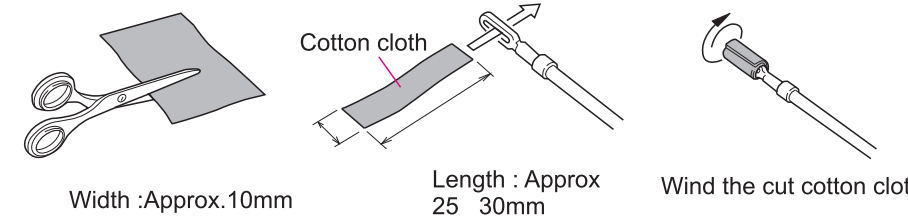

Labels: Cotton cloth, Wind the cut cotton cloth.

Width : Approx. 10mm Length : Approx 25 30mm

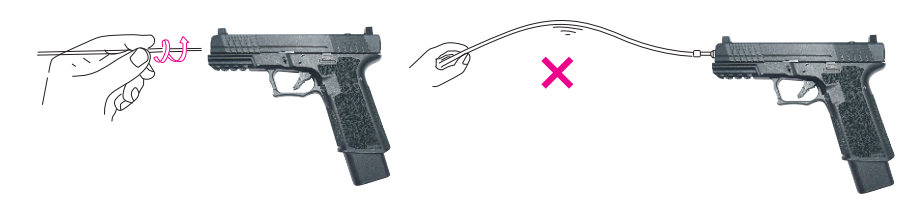

Warning

- Inserting the rod will be difficult if you hold rod at the end.

Hold at the leading end of the rod and insert the rod into the barrel while turning the rod.

6



DE AIRSOFT

For more information pls visit:
<http://www.deairsoft.com>

 @doubleairsoft

  @deairsoft